



BOSCH 150A ALTERNATOR KIT FOR NISSAN CA18 ENGINES INSTALLATION GUIDE

Contents :

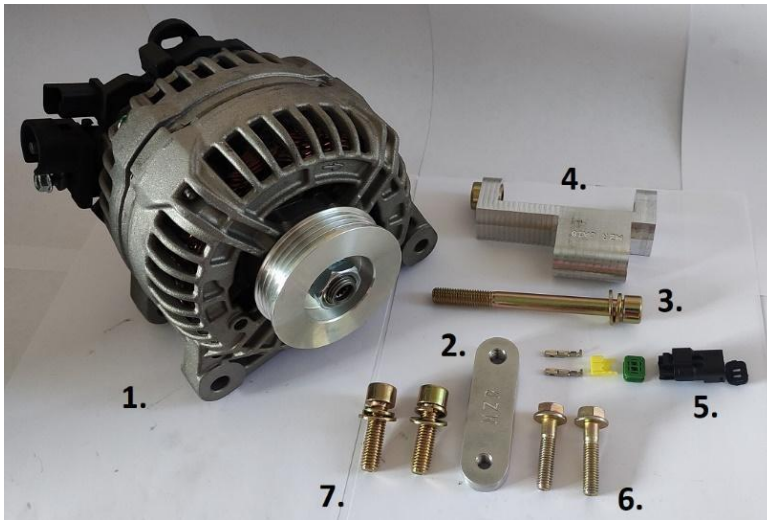


1. Bosch alternator 150A
2. Top tension bracket
3. M10 socket bolt
4. Lower bracket
5. Alternator connector
6. 2 x M8 bolt
7. 2 x M10 bolt with washers

Bosch alternator pinout :

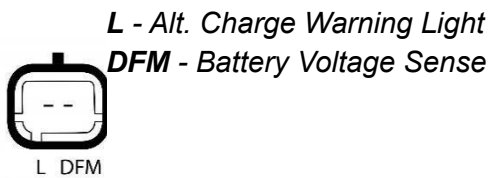

Nissan OEM alternator pinout :

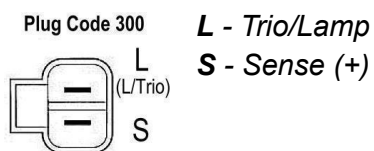

Installation :

1. Take off the OEM Nissan alternator.
2. Screw the lower bracket (4) to the engine using socket bolt (3) in the lowest position as seen in photo 1 (see arrow).



Photo 1

3. Screw the Bosch alternator 150A (1) using bolts (6 & 7) as seen in photo 2.



Photo 2

4. Screw the top tension bracket (2) to the alternator and OEM tensioner using bolts (6 & 7) as seen in photo 3.



Photo 3

5. Put belt on, tension it and tighten bolts. Due to so many different applications, accessories and pulley diameters, we cannot supply a universal belt.

A doubt? A question?

Do not hesitate to contact us at +33 185 086 186 or by email contact@driftshop.com