

POWERFLEX®

PART NUMBER

PFF25-501

DESCRIPTION

FRONT WISHBONE FRONT BUSH

INSTALLATION GUIDE

Contents (parts per pack):

- 2 x Polyurethane A Bushes
- 1 x PTFE/Silicone Grease
- 2 x Polyurethane B Bushes
- 2 x Stainless Steel Sleeves
- 4 x Zinc Plated Mild Steel Washers

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



Fitting Instructions:

1. Remove the original rubber bush from the front wishbone arm.
2. Clean any dirt and corrosion from the bore of the arm and file off any sharp edges.
3. Push polyurethane part A into the bore of the arm so that it is facing towards the front of the car. Push polyurethane part B so that it is facing towards the back of the car, as shown in Figure 1.
4. Apply some of the supplied grease into the bore of the polyurethane bush and push in the stainless steel sleeve so it sits flush inside the bore of the bush.
5. Place two zinc plated mild steel washers on either end of the polyurethane bush, as shown in Figure 1, and refit the arm back to the vehicle and tension all hardware to manufacturers recommended torque settings.

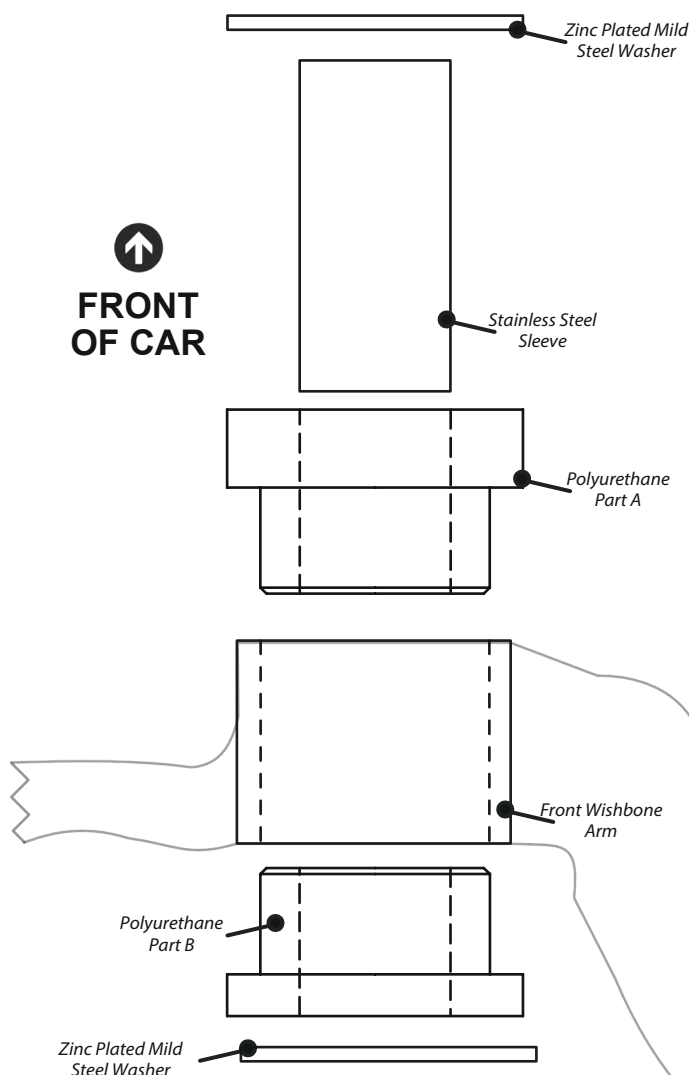


Figure 1